

Brighton Sailing Club

Mobile VHF radios Standard Horizon HX210 (radios R1, R2, R3)

1. How to operate:
 - a. On/off red button on front
 - b. Battery level black bar top right
 - c. Channel M2
 - d. To talk, press red button on side (PTT)
 - e. Squelch level press lower left button SQL (usually 1 is good)
 - f. Volume level keys on front
 - g. If you take this out to sea, keep it clipped securely to your buoyancy aid
 - h. When calling, state the name of the receiving station first e.g. "James this is Simon"
 - i. Carry out a radio check before going out to sea.
 - j. After use, replace into the charger cradle

2. If things go wrong:
 - a. Unlock keys: CLR hold down
 - b. Resetting power to LO: press any white software key below display, select power
 - c. Reset channel to M2 (above 88)
 - d. Check channel group is UK (see manual p14)
 - e. Manual is in radio box, or online at www.memsail.org.uk

3. Extra information:
 - a. Channel M2 is for leisure use, and avoids licensing issues. Look out for other users. Should avoid clash with Sussex Yacht races. 2nd choice would be channel M.
 - b. Default settings are: power LO, squelch 1, channel M2, keypad locked (CLR button).
 - c. Chargers are intelligent and can be left on
 - d. Use the static station when in the rescue hut.
 - e. This file is at www.memsail.org.uk

Paul Tofts April 16th 2022 e: vhf@memsail.org.uk